



DSC Quick Reference Guide

ARM ENTIRE SYSTEM – both interior and perimeter

- Close all windows and doors (the green ready light will turn on)
- Press and hold  (away) for 2 seconds (the keypad will beep rapidly 5 times and the red armed light will turn on)
- Exit premises before the delay time expires

DISARM system




- When you enter through the door, the keypad will emit a steady warning tone
- Enter your 4-digit master code or user code (the armed light will turn off)

If you make an error, press  and enter the 4-digit code again

ARM perimeter while in building

- Press and hold  (stay) for 2 seconds



ARM system with door or window open

- Press   while disarmed
- The bypass light will flash
- Enter the 2-digit zone number to be bypassed
- To exit the bypass function press 




SILENCE alarm

- Enter your 4-digit master code or user code

Viewing TROUBLE

- Press  
- Some keypads will describe the trouble (full-message keypads); others will only identify the trouble number (fixed-message and LED keypads)
- If trouble number 8 is lit, the time and date needs to be reset
- For all other trouble conditions, contact your security provider


 

TIME & DATE

-  
- Master code
- 
- 24-hr format (HH:MM, MM/DD/YY)
e.g: 8:30pm January 1, 2000 = 20:30 01/01/00






General Tips

- Arm system even when at home
- Test system at least 4 times per year
- Protect master code diligently. For nannies or


ACCESS CODES programming

- Press   and enter the 4-digit master code
- 1 long beep indicates an error, enter the master code again
- 3 short beeps indicates acknowledgement, enter the 2-digit user number to be programmed. User codes 01-48 are available for the PC1616. User codes 01-72 are available for the PC1832. User codes 01-95 are available for the PC1864.
- Enter the 4 digits for the code
- Enter another 2-digit number to program another code or press  to exit








DELETING access codes

- Press   and enter the 4-digit master code
- 1 long beep indicates an error; enter the master code again
- 3 short beeps indicates acknowledgement, enter the 2 digit user number to be removed. User codes 01-48 are available for the PC1616. User Codes 01-72 are available for the PC1832. User codes 01-95 are available for the PC1864.
- Enter  to remove the code and press  to exit
- Once the code has been removed, press  to exit


 
 
CHIME on/off

- Press and hold  (door chime) for 2 seconds
- 3 beeps = on; 1 long beep = off

Changing keypad BUZZER tone

- If using a PK5500 keypad, press   and enter the 4-digit master code then proceed with the following:
 - Scroll to the phrase “buzzer control” and press 
- If using a LED or fixed-message keypad, press   and enter the 4-digit master code then proceed with the following:
 - Press and hold  (left arrow)
 - The tone will change
 - When the desired tone is identified, release  (left arrow)

PANIC/sounding alarm manually

- Press and hold for 2 seconds  (fire) or  (medical) or  (police)

For additional functions & more information, please refer to your full DSC user's manual

