


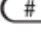
DSC Quick Reference Guide

To ARM entire system – both interior and perimeter

- Close all windows and doors (the green READY light will turn ON)
- Press and hold  (AWAY) for 2 seconds (the keypad will beep rapidly 5 times and the red ARMED light will turn ON)
- Exit premises before the delay time expires

To DISARM system when you return


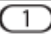

- When you enter through the door, the keypad will emit a steady warning tone
- Enter your 4-digit MASTER CODE or USER CODE (the armed light will turn OFF)

If you make an error, press  and enter the 4-digit code again

To ARM PERIMETER of building and still move freely inside

- Press and hold  (STAY) for 2 seconds


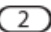
To ARM SYSTEM with door or window open

- Press   while disarmed
- The BYPASS light will flash
- Enter the 2-digit zone number to be bypassed
- To exit the BYPASS function press 


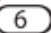


To SILENCE Alarm

- Enter your 4-digit MASTER CODE or USER CODE


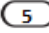

When TROUBLE LIGHT comes ON

- Press  
- Some keypads will describe the TROUBLE (full-message keypads); others will only identify the TROUBLE number (fixed-message and LED keypads)
- If TROUBLE number 8 is lit, the time and date needs to be reset
- For all other TROUBLE conditions, contact your security provider


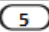



To SET time and date

- Press   and enter the 4-digit MASTER CODE
- 1 long beep indicates an error, press  and enter the MASTER CODE again
- After 4 short beeps, press  then 10 digits, 2 each for the hour and minute, then month, day, and year (HH:MM MM/DD/YY)
- Use a 24-hour clock (e.g. 8:30pm = 20:30)
- Use 2 digits each to indicate the month and day (e.g. March 8 = 03 08)


To ADD Access Codes

- Press   and enter the 4-digit MASTER CODE
- 1 long beep indicates an error, enter the MASTER CODE again
- 3 short beeps indicates acknowledgement, enter the 2-digit user number to be programmed. User codes 01-48 are available for the PC1616. User codes 01-72 are available for the PC1832. User codes 01-95 are available for the PC1864.
- Enter the 4 digits for the code
- Enter another 2-digit number to program another code or press  to exit


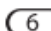


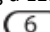


To REMOVE Access Codes

- Press   and enter the 4-digit MASTER CODE
- 1 long beep indicates an error; enter the MASTER CODE again
- 3 short beeps indicates acknowledgement, enter the 2 digit user number to be removed. User codes 01-48 are available for the PC1616. User Codes 01-72 are available for the PC1832. User codes 01-95 are available for the PC1864.
- Enter  to remove the code and press  to exit
- Once the code has been removed, press  to exit

To ENABLE door chime feature

- Press and hold  (Door Chime) for 2 seconds
- 3 beeps = ON; 1 long beep = OFF

CHANGING keypad buzzer tone

- If using a PK5500 keypad, press   and enter the 4-digit MASTERCODE then proceed with the following:
 - Scroll to the phrase "BUZZER CONTROL" and press 
- If using a LED or fixed-message keypad, press   and enter the 4-digit MASTER CODE then proceed with the following:
 - Press and hold  (Left Arrow)
 - The tone will change
 - When the desired tone is identified, release  (Left Arrow)

To SOUND an alarm manually

- Press and hold  (Fire) or  (Emergency) or  (Panic for 2 seconds)

For MORE information

- Visit <https://alarvac.com/support/> to download the complete user manual
- For additional support, please call Alarvac at 416-520-4080

